

# TRIPLE SHADOW SIDING INSTALLATION INSTRUCTIONS

1. Select orientation: horizontal or vertical. To count a coverage consider that each Triple Shadow Siding Plank has width 5-1/4" with tongue and 5" coverage when installed.



2. If starting installation from some point on the wall, use a level and draw a line on the wall for a starter board.



3. Use pneumatic nail gun to nail boards down to the wall. If wall is perfectly flat, usually enough to put nails in the tongue and overlap them with the next board. To enforce installation you may nail boards also from the other side through the face (finishing nails are almost not visible).





- For indoor installation use finishing nails # 18 of 2 in. long
  - For outdoor installation use finishing nails # 16 of 2 or 2.5 in. long
- Adjust nail gun to deliver nails flush or 1/32" deep in to the wood.



4. Cutting in length: use miter saw to cut boards to the desired lengths.

5. Corner's installation: you may cover outside and inside corners with different combinations of the boards. On the pictures are two the most common ways of installations.

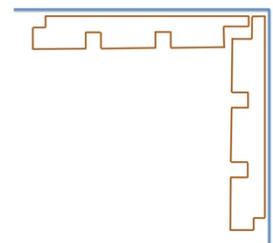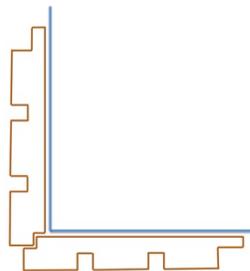

6. If you need to attach wall art or shelves on top of the wall planks, drill the holes and put hangers through the boards on your wall. Don't hang anything heavier than 1-2 lbs. on the boards themselves!

7. For outdoors install wood siding over furring strips (use 1 or 2 foot span) for ventilation. Use outdoor rated nails or screws. Use finishing nails or installation clips for T&G siding for the hidden fastening look. Thermo-treated wood furring strips are available.

